





9. EXPLODED VIEWS AND PARTS LIST

- NOTES:
- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to  mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

 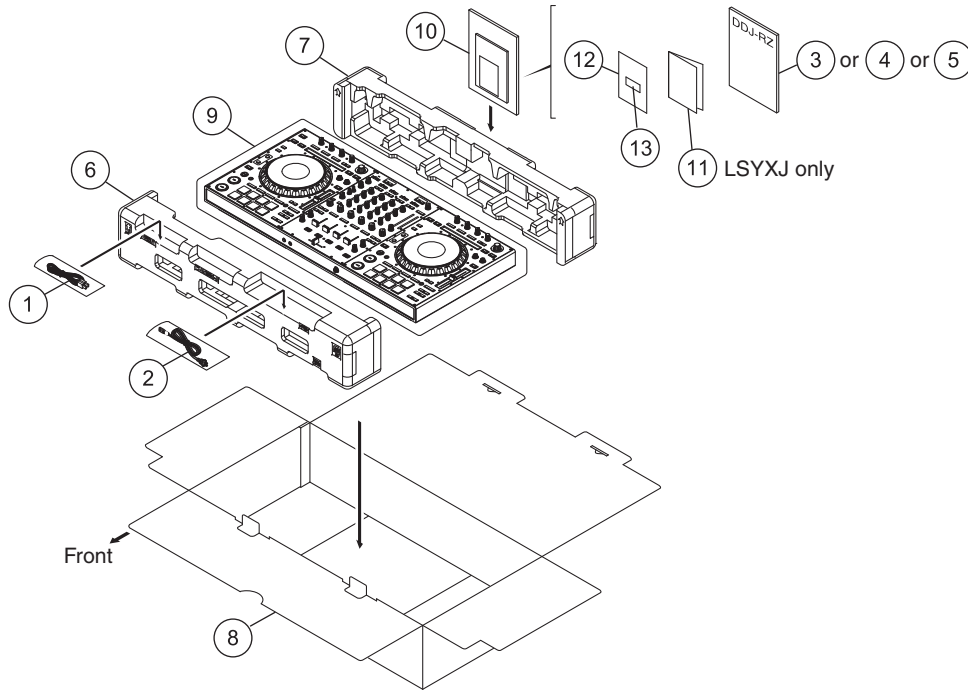


(1) PACKING SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
	1 USB Cable	DDE1128	5	Operating Instructions (Quick Start Guide)	See Contrast table (2)
	2 Power Cord	See Contrast table (2)	6	Pad/F	DHA1914
	3 Operating Instructions (Quick Start Guide)	See Contrast table (2)	7	Pad/R	DHA1915
	4 Operating Instructions (Quick Start Guide)	See Contrast table (2)	8	Packing Case	See Contrast table (2)
			9	Mirror Mat (1200*1000)	DHL1169
			NSP 10	Polyethylene Bag	AHG7117
			NSP 11	Warranty	See Contrast table (2)
			NSP 12	Leaflet	DRM1410
			NSP 13	rekordbox dj license key	DXA2304

(2) CONTRAST TABLE

DDJ-RZ/UXJCB, LSYXJ and XJCN are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-RZ/UXJCB	DDJ-RZ/LSYXJ	DDJ-RZ/XJCN
	2	Power Cord	DDG1108	ADG1244	DDG1114
	3	Operating Instructions (Quick Start Guide) (En, Fr, De, It, Ne, Es, Pt, Ru)	Not used	DRH1327	Not used
	4	Operating Instructions (Quick Start Guide)(En)	DRH1326	Not used	Not used
	5	Operating Instructions (Quick Start Guide)(Zhcn)	Not used	Not used	DRH1328
	8	Packing Case	DHG3417	DHG3416	DHG3419
NSP	11	Warranty	Not used	ARY7158	Not used