

9.3 DISPLAY SECTION

1

2

3

4

A ■ Center

■ Left and Right


B

C


D

E

F

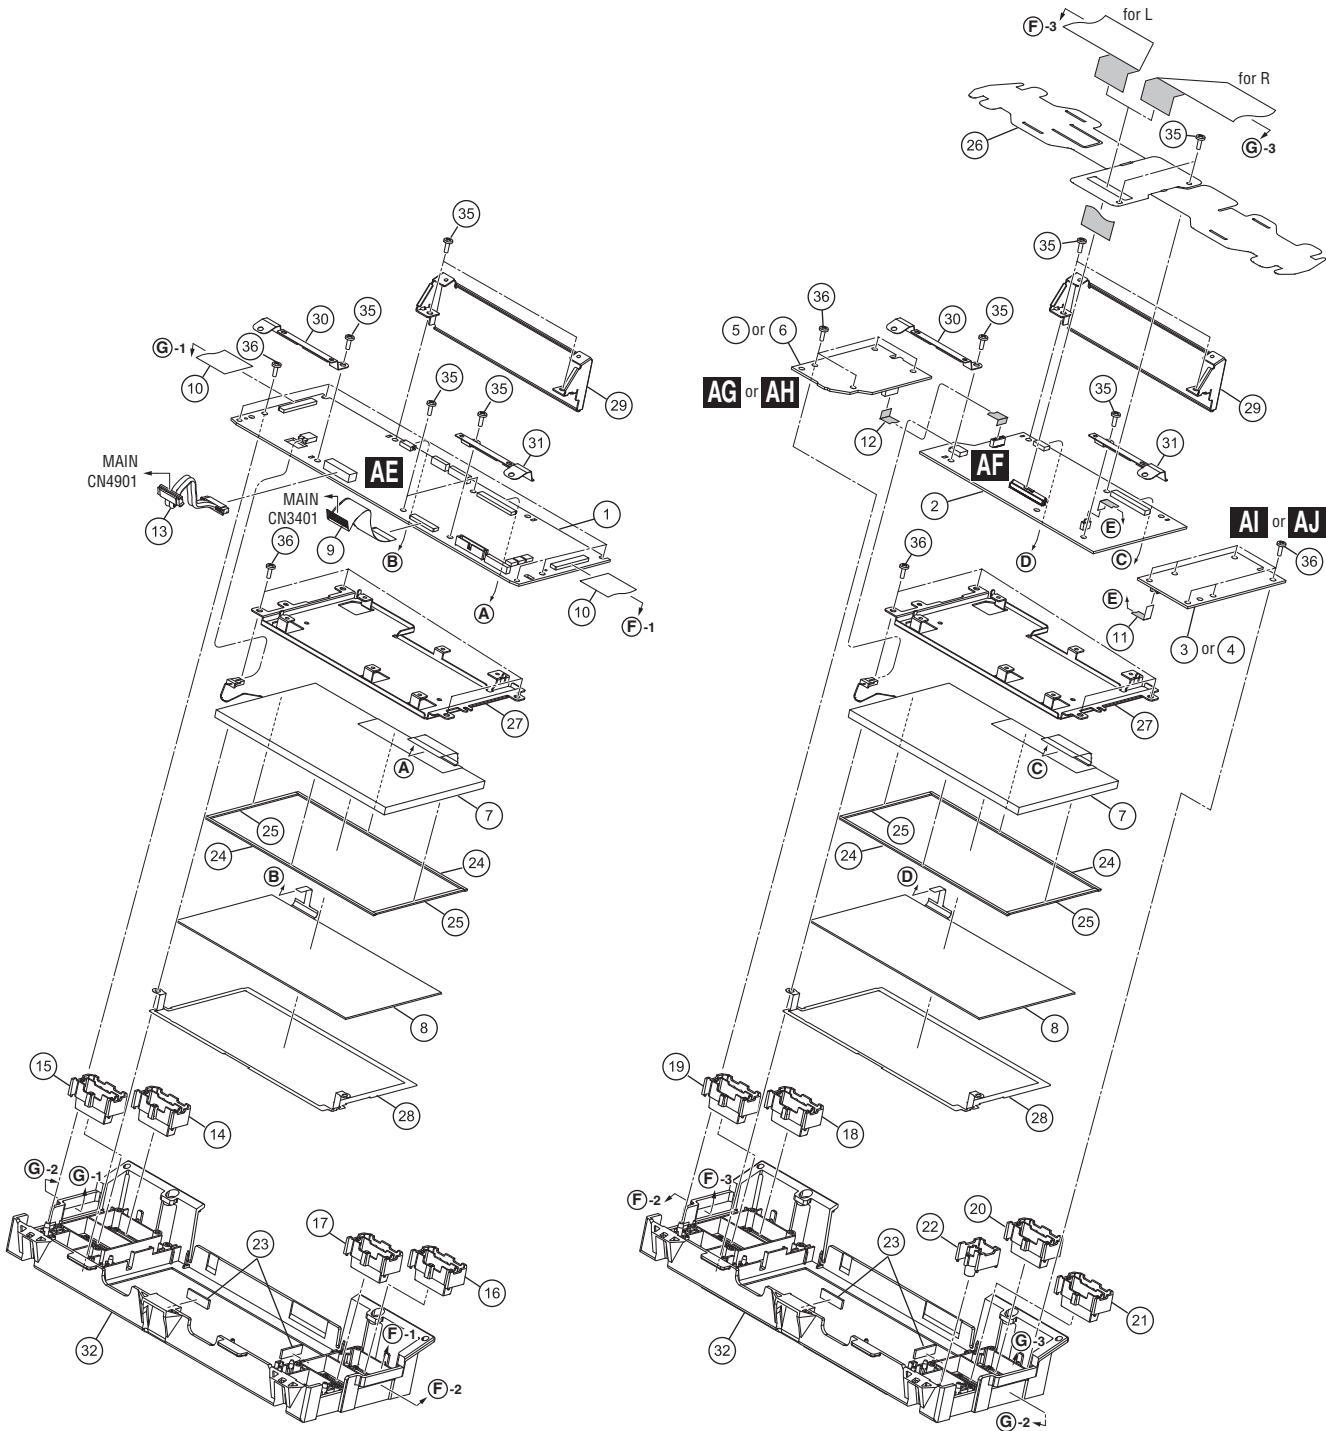

• Bottom view

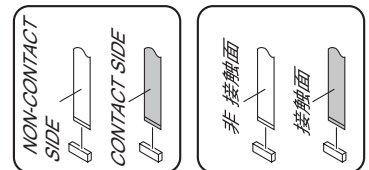

1

2

3

4

DISPLAY SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	LCDM Assy	DWX3828	
2	LCDP Assy	DWX3791	A
3	MSL1 Assy	DWX3884	
4	MSL2 Assy	DWX3885	
5	XYM1 Assy	DWX3886	
6	XYM2 Assy	DWX3887	
7	TFT LCD	CWX4352	
8	Touch Panel	DSX1128	
9	FFC	DDD1703	
10	FFC	DDD1740	
11	FFC	ADD7783	B
12	10P FFC	DDD1533	
13	Shielded Conn-Cable	DDA1075	
14	Button	DAC3170	
15	Button	DAC3172	
16	Button	DAC3175	
17	Button	DAC3176	
18	Button	DAC3173	
19	Button	DAC3174	
20	Button	DAC3177	C
21	Button	DAC3178	
22	Button	DAC3171	
23	Packing/LCD	DEC3565	
24	Packing/L	DEC3568	
25	Packing/S	DEC3569	
26	Sheet	DEC3678	
27	Bracket	DNF1991	
28	Plate/GND	DNH3173	
29	Angle	DNH3256	D
30	Angle	DNH3277	
31	Angle	DNH3278	
32	Holder	DNK6612	
33	•••••		
34	•••••		
35	Screw	BBZ30P080FTB	
36	Screw	BPZ30P080FNI	E