

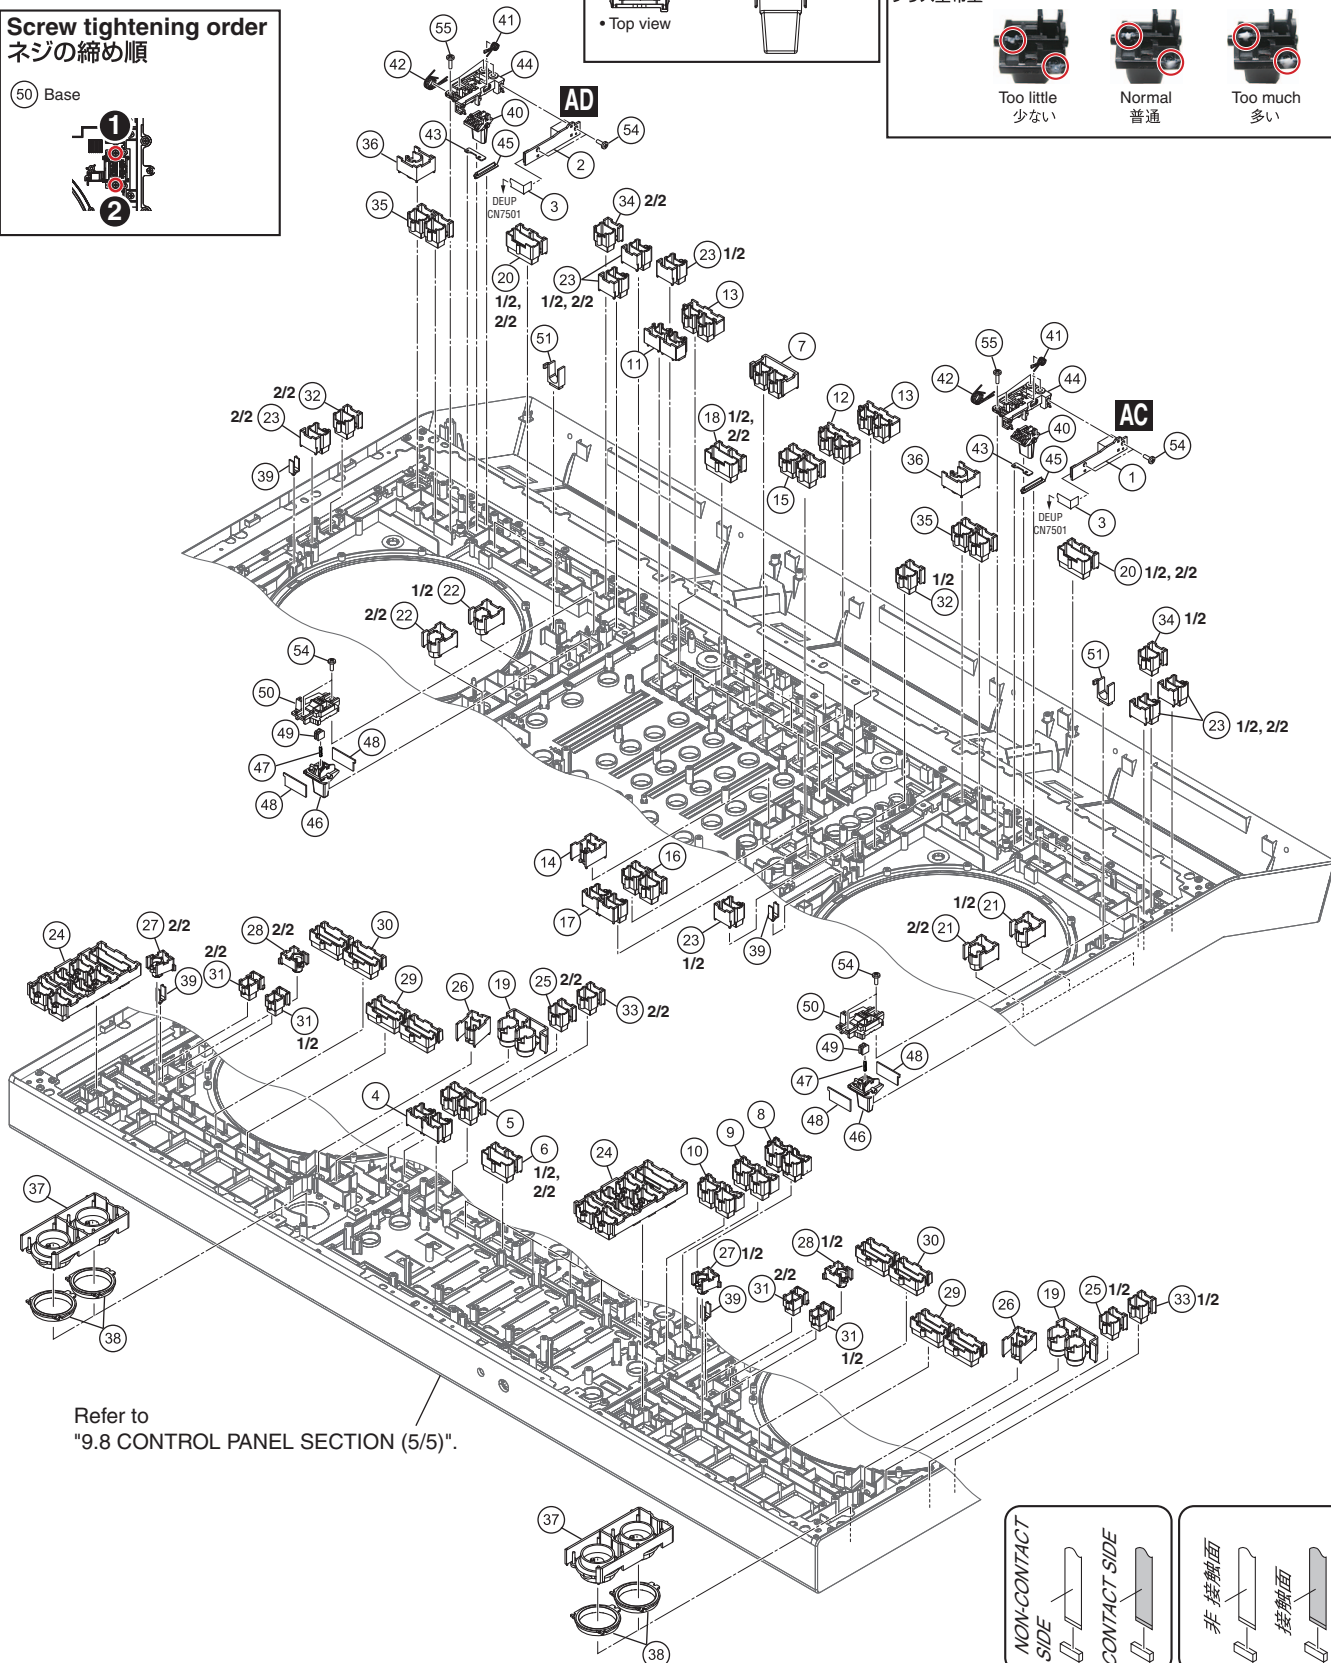
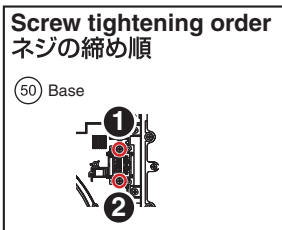
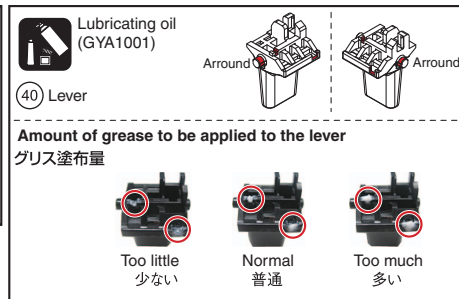
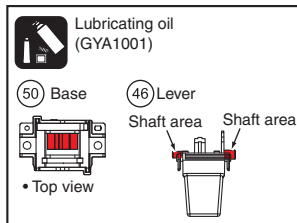


9.7 CONTROL PANEL SECTION (4/5)

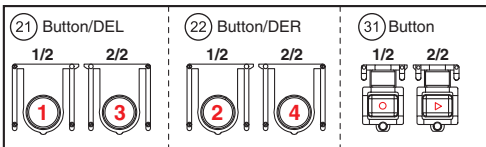

Refer to "9.8 CONTROL PANEL SECTION (5/5)".

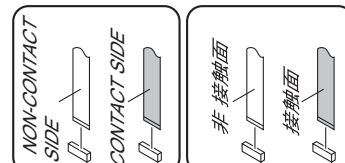

CONTROL PANEL SECTION (4/5) PARTS LIST

	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1	RFX1 Assy	DWX3820	46	Lever	DAC3097
	2	RFX2 Assy	DWX3821	47	Lever Spring	DBH1702
	3	FFC	DDD1752	48	Brake	DEC3634
	4	Button/FX2	DAC2986	49	Lever CAP	DNK5344
	5	Button	DAC3154	50	Base	DNK6470
	6	Button	DAC3155	51	Lens	DNK6622
	7	Button	DAC3156	52	•••••	
	8	Button	DAC3166	53	•••••	
	9	Button	DAC3179	54	Screw	BPZ30P080FNI
	10	Button	DAC3180	55	Screw	BPZ30P100FTC
B	11	Button	DAC3167			
	12	Button	DAC3186			
	13	Button	DAC3187			
	14	Button	DAC3193			
	15	Button	DAC3223			
	16	Button	DAC3181			
	17	Button	DAC3182			
	18	Button	DAC3224			
	19	Button/BSY	DAC2810			
	20	Button/ON	DAC2991			
C	21	Button/DEL	DAC3000			
	22	Button/DER	DAC3001			
	23	Button	DAC3125			
	24	Button	DAC3128			
	25	Button	DAC3239			
	26	Button	DAC3194			
	27	Button	DAC3185			
	28	Button	DAC3184			
	29	Button	DAC3196			
	30	Button	DAC3204			
D	31	Button	DAC3168			
	32	Button	DAC3225			
	33	Button	DAC3240			
	34	Button	DAC3228			
	35	Button	DAC3226			
	36	Button	DAC3227			
	37	Button	DXB2174			
	38	Ring Rens (PLAY)	DNK5315			
	39	Lens/TMP	DNK6307			
	40	Lever	DAC2804			
E	41	Torsion Spring/LVR	DBH1790			
	42	Torsion Spring/PRS	DBH1791			
	43	Cushion	DEB1999			
	44	Holder/LVR	DNK6025			
	45	Lens	DNK6620			