

JOG DIAL SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	JFLB1 Assy (for Left deck)	DWX3795	
2	JFLB2 Assy (for right deck)	DWX3796	A
3	JOGR1 Assy (for Left deck)	DWX3815	
4	JOGR2 Assy (for right deck)	DWX3827	
5	Jog Plate	DAH2679	
6	Coil Spring/LD	DBH1798	
7	SW Spring	DBH1681	
8	SW Cushion Hh48/2	DEC2538	
9	Cushion/RNG	DEC3466	
10	Washer	DEC3137	
11	Link Plate	DNH2848	B
12	Jog B	DNK4068	
13	SW Ring	DNK5233	
14	Gear/LD	DNK6145	
15	Smoother	DNK5237	
16	Holder	DNK6556	
17	Comp Plate	DNK5243	
18	Adjust Plate	DNK5300	
19	Cam Plate	DNK5301	
20	Dial Gear	DNK5302	C
21	Link Gear A	DNK5303	
22	Link Gear B	DNK5304	
23	Rack Plate	DNK5305	
24	Sheet SW	DSX1078	
25	Jog Dial A Assy	DXA2159	
26	Roller	DXB2178	
27	Stay Assy/Jog	DXB2133	
28	Encoder Spring	DBH1710	
29	Plate	DEC3700	
30	Gear/A	DNK6143	D
31	Gear/B	DNK6144	
32	Leaf Spring/ADJ	DBK1376	
33	Jog Panel	DAH2609	
34	FFC	DDD1746	
35	Screw (FE)	DBA1265	
36	Screw	BPZ20P100FTC	
37	Screw	BPZ30P080FNI	
38	Screw	IPZ20P060FTC	E