



EN
CASIO®

 
You can download music score data as a PDF file from the CASIO website. You will then be able to view music scores on your smart device. You can jump from the PDF file table of contents directly to the music score you want, and you can print out scores as needed.

Changing Settings Such as the Sound Mode

SOUND MODE

Select a key while holding down the **SOUND MODE** button.

- If you press a key while changing a setting, the number of times the notification tone sounds varies according to the value set and the sequence.
- When you disable a setting, a low tone sounds.
- When (Tone) is selected, a value appropriate for the selected tone is automatically set.

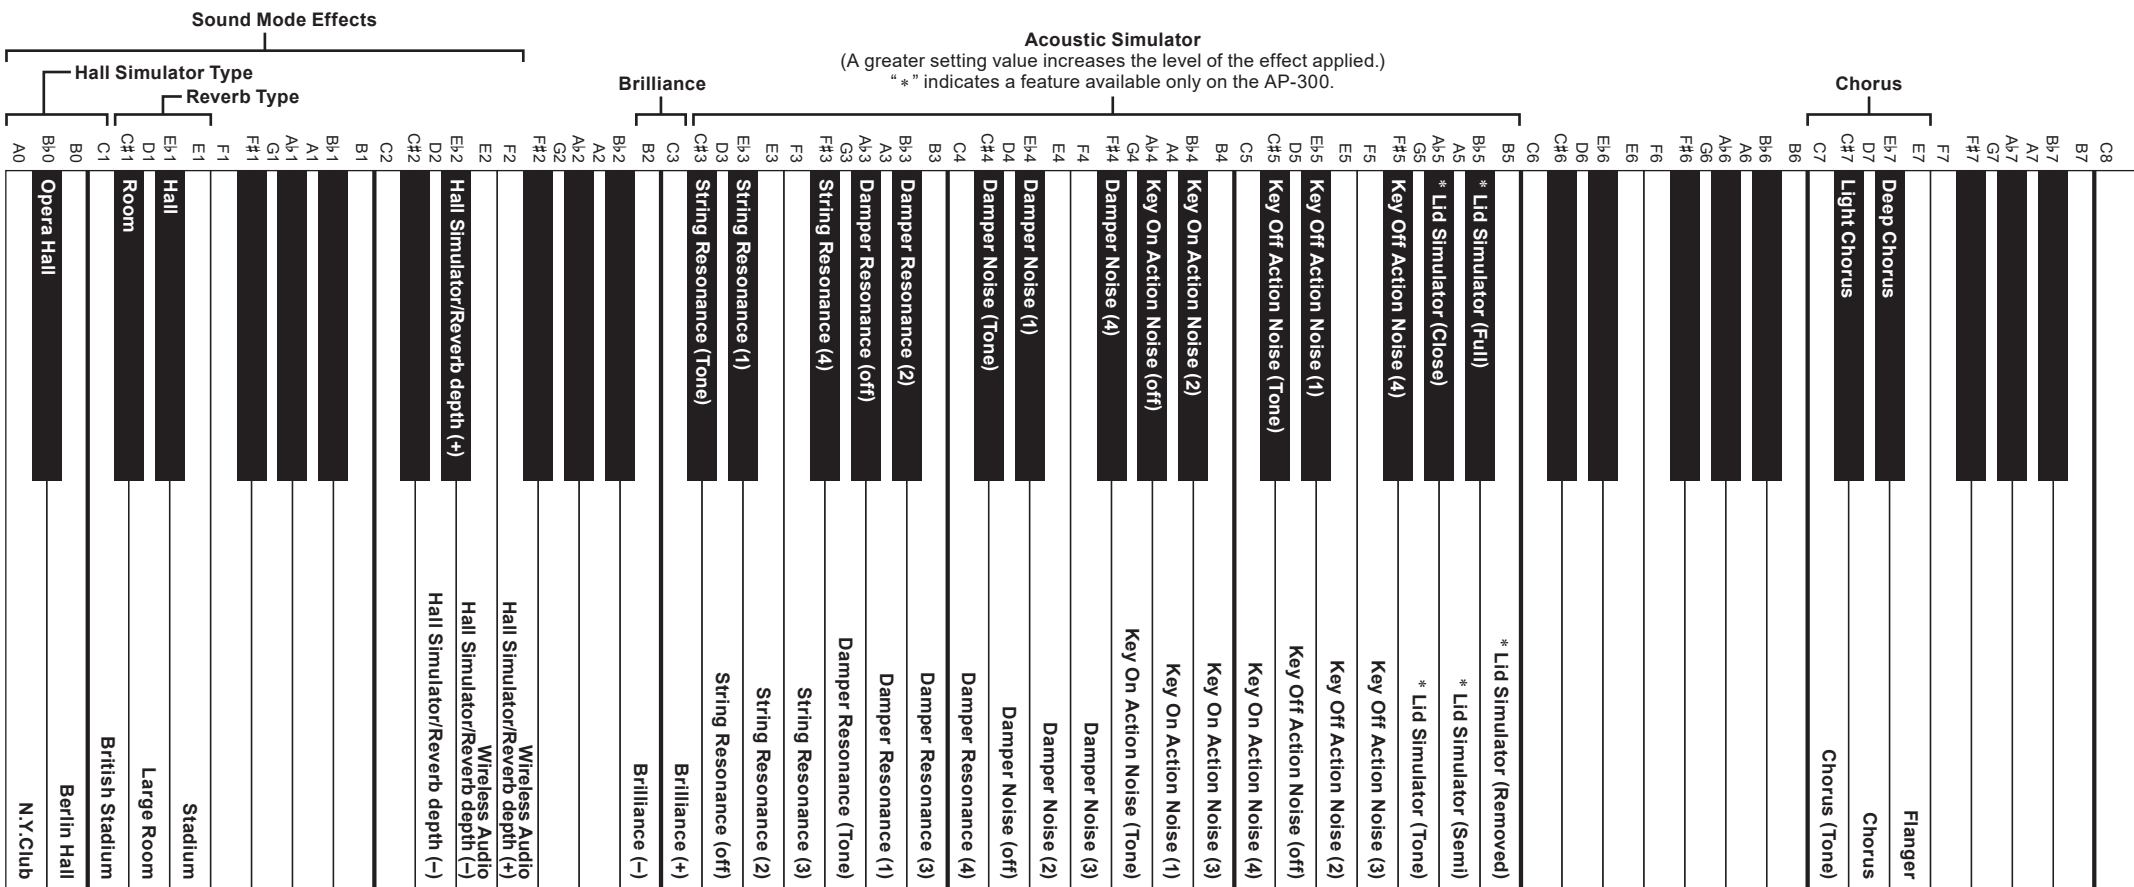

Using the Sound Mode Effects (Hall Simulator/Reverb and Surround)

■ Turning the Hall Simulator/Reverb and Surround On/Off

Each time **SOUND MODE** button is touched, each effect is toggled On/Off in sequence.

When the Hall Simulator/Reverb is On, the Hall Simulator/Reverb indicator lights up.

When Surround is On, the Surround indicator lights up.

■ Surround

When Surround is On, the Surround sound effect is applied to the sound output from the build-in speakers.

■ To specify the Hall Simulator/Reverb Type

Hall Simulator

The Hall Simulator effect simulates the rich clarity, unconstrained brilliance, and other distinctive acoustic characteristics of world-famous concert halls and structures.

- While holding down **SOUND MODE** button, press any one of the A0 to C1 keys.

Reverb

Reverb simulates ambient spaces, such as a room or hall.

 
- While holding down **SOUND MODE** button, press any one of the C#1 to E1 keys.

Changing the Metronome and Tempo Settings

METRONOME

Select a key while holding down the **METRONOME** button.

- If you press a key while changing a setting, the number of times the notification tone sounds varies according to the value set and the sequence.
- When you disable a setting, a low tone sounds.

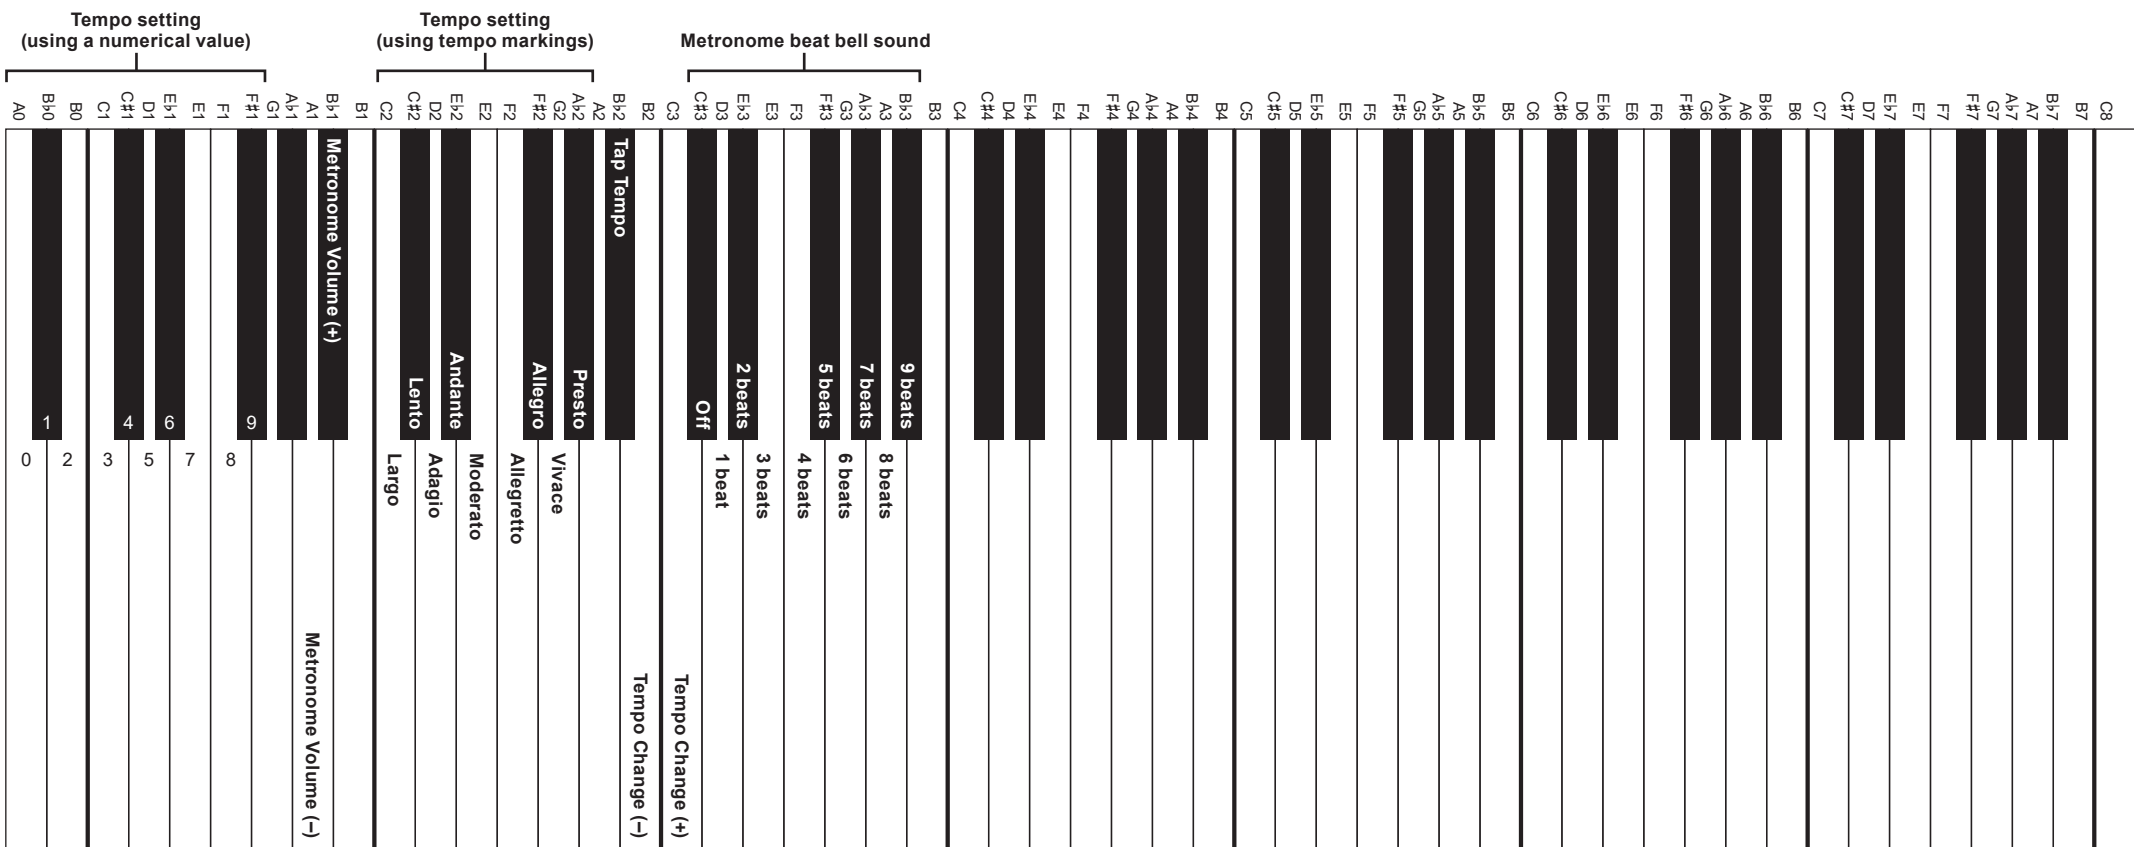

Using the Metronome

Touch the **METRONOME** button to start the metronome.

The beat indicator lights up in time with the metronome beat and tempo.

Touch the **METRONOME** button again to stop the metronome.

Input Tempo Numerically

 
The tempo can be set between 20 and 255 (beats/minute). Press and hold **METRONOME** button then use the A0 to F#1 keys to set the tempo.

Selecting Songs



Select a key while holding down the ►/■ button.

- If you press a key while changing a setting, the number of times the notification tone sounds varies according to the value set and the sequence.
- The functions assigned to the keyboard change during demo song playback. For more information, refer to the USER'S GUIDE on the CASIO website.

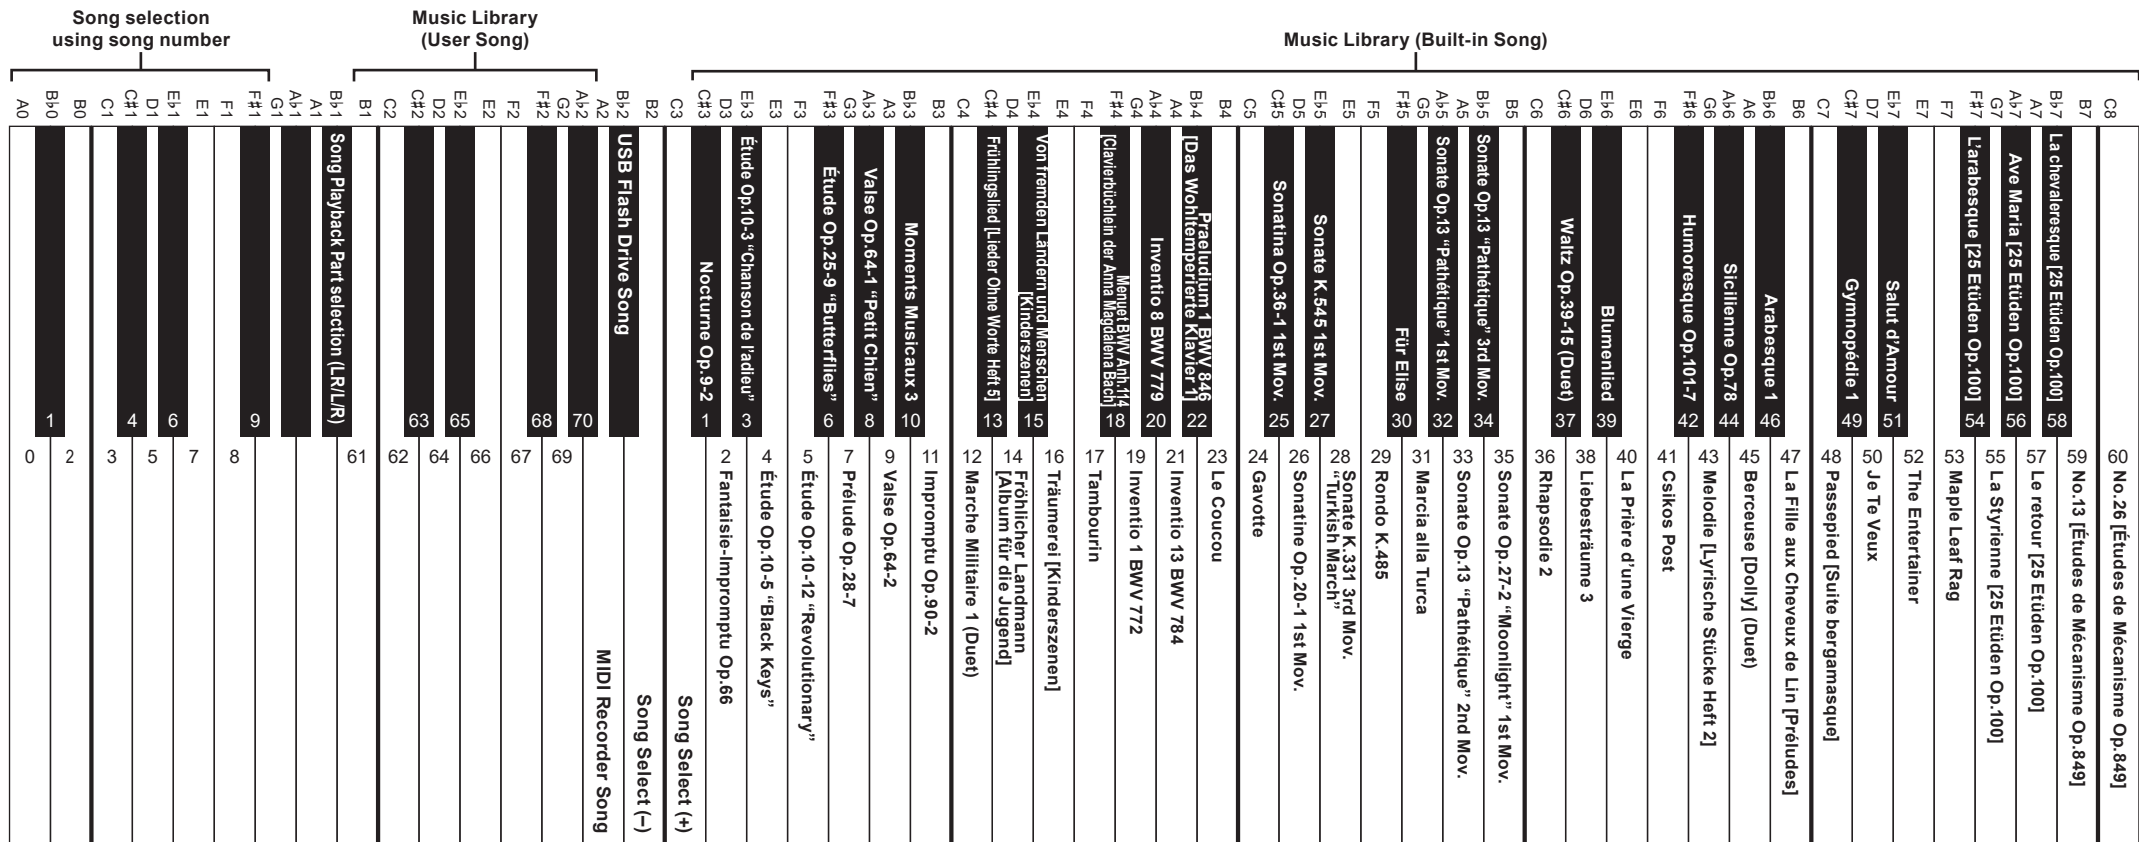

Selecting Songs Using Song Numbers

Hold down the ►/■ button and use the A0 to F#1 keys to enter the song number.

Song Number	Songs
1 to 60	Music Library (Built-in Song)
61 to 70	Music Library (User Song)

Changing Settings Such as the Tone

GRAND PIANO

Select a key while holding down the **GRAND PIANO** button.

- If you press a key while changing a setting, the number of times the notification tone sounds varies according to the value set and the sequence.
- When you disable a setting, a low tone sounds.

