

Care and Maintenance of Wood Products

Thank you very much for purchasing a Roland digital piano.

As this product uses real wood, it is subject to changes in temperature and humidity, in the same way as furniture made from wood. For this reason, the product must be set up in an appropriate place, and it must be properly cared for.

About the natural markings

- The wood used in this product has been finished to accentuate its natural appearance and texture. As a result, the colorations and woodgrain (natural markings) of each product and part may vary. This signifies that the product is made of natural wood, and this has no adverse effect on quality.

Changes in color over time

- The color and texture of real wood changes over the course of time. Some differences in color may become apparent due to where natural or artificial light strikes the surface.

Points of caution regarding where this product is set up and used

- Do not set up this product in the following kinds of places.
 - Places with high humidity
 - Places exposed to direct sunlight
 - Places close to devices or machinery that give off heat
 - Places close to air conditioning equipment
 - Places in which the air does not circulate for extended periods of time
- Do not set up this product in environments or places subject to high humidity. This may cause the wood to expand and deform, cause mold to form and grow on the surface of the wood, or cause discoloration in the materials of the wooden parts. In particular, ventilate the room or use air conditioning to regulate the humidity during seasons in which the humidity tends to be higher. When using air conditioning, be sure that this product is not directly exposed to the hot or cold air coming from the air conditioning unit. On the other hand, use caution when setting up this product in dry places where the humidity is extremely low, as the wood may shrink and cracks may form or the wood may deform.
- If you relocate this product to a place where the temperature and humidity are very different, moisture may form on the surface or on the interior of this product, causing the wood to deform or become discolored. Use a dry cloth to wipe off any moisture right away that may form on the surface of this product. Using this product while moisture has formed may cause it to malfunction. Allow the moisture to evaporate by leaving the product for several hours.
- Do not shine direct lights on this product in the same position, such as lighting at a very close distance or powerful spotlights. This could cause deformation or discoloration.
- Do not allow rubber, vinyl, or similar materials to remain on this product for long periods of time. This could cause deformation or discoloration.
- Do not paste stickers, decals or the like on this instrument. These could damage the exterior finish when peeled off, or leave marks.

Caring for and maintaining this product

- Use a soft cloth or a feather brush designed for pianos to lightly wipe the surface of this product. Be careful, as even small grains of dust can leave small abrasions on the surface when wiped strongly.
- Wood is extremely sensitive to humidity. Wiping the wooden parts with a wet cloth or other damp materials may cause the wood to deform or become discolored. Use a soft, dry cloth to promptly wipe off any dirt. If you do not do this, the dirt may eventually become difficult to remove.
- Never use benzene, thinners, or alcohol of any kind. Doing so may cause discoloration or deformation.

* See the "Owner's Manual" and the "Using the Unit Safely" leaflet for how to handle the parts aside from the wooden materials, as well as the instrument itself.

