

# MAGICFX® SMOKEJET

## USER MANUAL



## **DISCLAIMER**

---

**WARNING**

Read this manual carefully before installing and/or using this product. Failure to read the manual and to follow the printed instructions may lead to personal injury and/or damage to the product.

---

© 2016 MAGICFX®  
All rights reserved.

Nothing from this publication may be copied, reproduced and/or published by means of printing, photocopying or by any other means, without the prior written approval of MAGIC FX.

MAGIC FX reserves the right to modify specifications stated in this manual.

## **TRADEMARKS**

Any brand names mentioned in this manual are registered trademarks of their respective owners.

## **LIABILITY**

MAGIC FX accepts no liability for claims from third parties arising from unauthorised use, use other than that stated in this manual, and use other than in accordance with the General Conditions registered at the Chamber of Commerce.

Refer further to the General Conditions. These are available on request, free of charge.

Although considerable care has been taken to ensure a correct and suitably comprehensive description of all relevant components, the manual may nonetheless contain errors and inaccuracies.

Should you detect any errors or inaccuracies in the manual, we would be grateful if you would inform us. This helps us to further improve our documentation.

# MAGICFX® SMOKEJET

## User Manual

### SAFETY INFORMATION



Please read the following safety information carefully before operating the machine. Information includes important safety information about installation, usage, and maintenance. Pay attention to all warning labels and instructions in this manual and printed on the machine.

If you have questions about how to operate the machine safely, please contact your local MAGIC FX dealer for help.

- Keep this device dry.
- Always connect to a grounded circuit to avoid risk of electrocution.
- Before connecting machine to power, always check voltage indicate on machine match to your local AC voltage. Do not use the machine if AC power voltage does not match.
- Disconnect the machine from AC power before servicing and when not in use.
- This product is for indoor use only! Do not expose to rain or moisture. If fluid is spilled, disconnect AC power and clean with a damp cloth. If fluid is spilled onto electronic parts, immediately unplug the machine and contact your local MAGIC FX dealer for advice.
- No user serviceable and modifiable parts inside. Never try to repair this product, unauthorized technician may lead machine to damage or malfunction.
- For adult use only. Never leave the machine running unattended.
- Installed in well ventilated area. Provide at least 50 cm space around the machine.
- Never add flammable liquid of any kind to the machine.
- Make sure there are no flammable materials close to the machine while operating.
- Only use MAGIC FX fluid. Other fluid may lead to heater clog and malfunction.
- If the machine fails to work, unplug the machine and stop operation immediately. Contact your local MAGIC FX dealer for advise.
- Before transporting the machine, make sure the fluid tank is completely drained.
- Smoke fluid may present health risks if swallowed. Do not drink smoke fluid. Store it securely. In case of eye contact or if fluid is swallowed immediately look for medical advice.


## UNPACKING AND INSPECTION

Immediately upon receiving the machine, carefully unpack the carton, check all content to ensure that all parts are present and have been received in good condition. If any parts appear damaged or mishandled from shipping, notify the shipper immediately and retrain the packing material for inspection.

**What is included:**

- 1 x SMOKEJET
- 1 x Remote
- 1 x PowerCON True1 to Shuko (1,5 m)
- 1 x User Manual

## PRODUCT DIMENSION

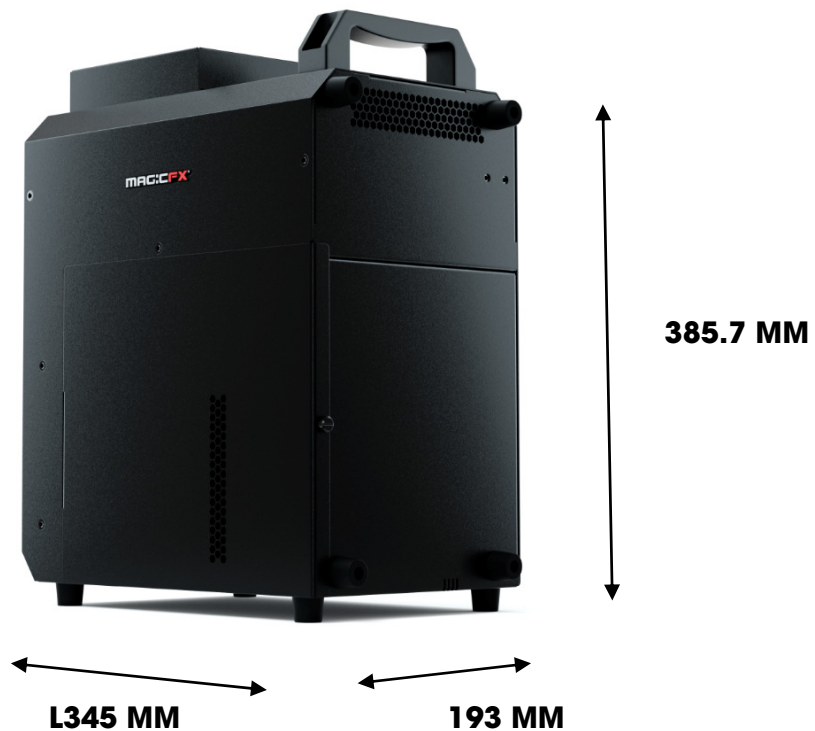

## PRODUCT OVERVIEW



22 x 3W LED  
(5R, 6G, 6B, 5A)

LCD Control Panel

Wireless Receiver

PowerCon

XLR 5-Pin DMX Connector

## SETTING UP

**Step 1:** Place the machine on a flat surface and in a suitable large area with at least 50 cm open space around the machine.

**Step 2:** Fill the fluid tank with MAGIC FX approved fluid.

**Step 3:** Connect the machine to suitable rated power supply. To determine the power requirement for the machine refer to the label on the back of the machine.



Always connect the machine to a protected circuit and ensure it is properly grounded to avoid risk of electrocution.

**Step 4:** Turn on the machine and allow it to heat up. Heat up takes approximately 5 minutes. Once the machine has reached operating temperature, the LCD display will show "Ready To Fog". Now the machine is ready for operation.

**Step 5:** To start making fog, locate the **OUTPUT** button on the control panel, and press the button to start making fog.

**Step 6:** To turn off the machine, press **STOP** button and turn Powercon to the **OFF** position.

# OPERATION

## Control Panel Operation

The machine can be operated with onboard digital control interface



Button	Function
(MENU)	Scroll through setting menu
▲ (UP)/(TIMER)	Up/Activate Timer function
▼ (DOWN)/(OUTPUT)	Down/Activate Output function
(STOP)	Deactivate Timer/Volume function

## CONTROL MENU

DMX512

Address: 1

Set DMX address from 1 to 504

Stand Alone

Set Master

Set machine as Master of Slave unit

Color Mode

On

Turn LED On or Off

Color Mode

Marco:01

Set LED output color from macro 1 to 10

Color Mode Chase:01	Set LED chase from 1 to 15
Timer Interval 15 Sec	Set interval from 15 to 360 seconds
Timer Duration 5 Sec	Set duration from 1 to 5 seconds
Wireless Setting On	Turn On or Off wireless control
Wireless Setting Button A:M01	Set wireless remote button function macro color 1 to 10 or chase 1 to 15 and off.
Wireless Setting Button B:M01	Set wireless remote button function macro color 1 to 10 or chase 1 to 15 and off.
Wireless Setting Button C:M01	Set wireless remote button function macro color 1 to 10 or chase 1 to 15 and off.
Wireless Setting Button D:M01	Set wireless remote button function macro color 1 to 10 or chase 1 to 15 and off.
LED Setting Fog Only	Setting for LED to turn on with fog only or always on.
LED Fade Out Delay: 0 Sec	Set LED delay time from 0 to 5 seconds.
Run Last Setting On	Turn On/Off run last setting function

2 Second Jet Mode Off	Turn On/Off 2 Second Jet Mode
W-DMX Power Off	Turn On/Off W-DMX
W-DMX Reset Off	Rest W-DMX connection

## WIRELESS OPERATION

Wireless remote control system consists of a transmitter equipped with four buttons to activate four user configurable LED setting and fog; with an onboard receiver attach to the rear panel of Smokejet.



*Remote*



*Wireless Receiver*

Wireless settings are configurable through onboard control panel, refer to control menu section to setup each buttons.

In a free open space the effective distance is 50 meters, actual usage depending on obstacle level the effective distance is 10-25 meters.

## REGISTERING TRANSMITTER


Transmitter can be pair or deleted from the receiver. Each receiver can pair up to 10 transmitters. Follow below steps to pair or delete transmitter from receiver.

Step 1: Power off SMOKEJET

Step 2: Press and hold (DOWN) button

Step 3: Turn power on and release (DOWN) button when LCD display blinks

Step 4: Follow the menu instruction to pair or delete transmitter

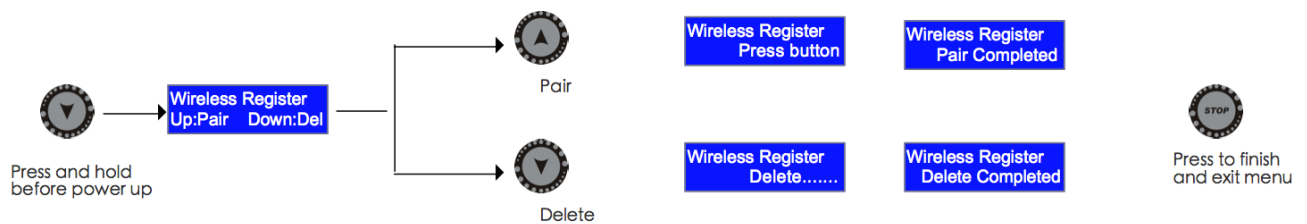


## TRANSMITTER BATTERY REPLACEMENT

If effective distance seems to be decreased, it is possible the battery level are low and require replacement. In order to replace the battery, undo the three screws on the back of transmitter to release the cover. Replace with same type and specification of battery which is 27A 12V

## DMX CONNECTOR PIN ASSIGNMENT

The machine provides 5 pin XLR connector for DMX connection. Diagram below indicate pin assignment information

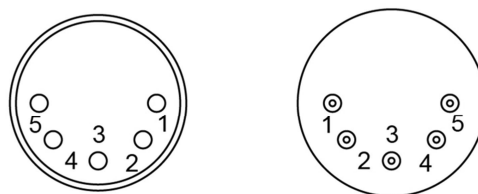

5 Pin XLR

Pin	Function
1	Ground
2	Data-
3	Data+

**DMX CHANNEL FUNCTION**

<b>Channel 1</b>	<b>DMX Value Range</b>	<b>Function</b>
Fog	0 - 4	Fog Off
	5 - 255	Fog On
<b>Channel 2</b>	<b>DMX Value Range</b>	<b>Function</b>
Red LED	0-255	0-100%
<b>Channel 3</b>	<b>DMX Value Range</b>	<b>Function</b>
Green LED	0-255	0-100%
<b>Channel 4</b>	<b>DMX Value Range</b>	<b>Function</b>
Blue LED	0-255	0-100%
<b>Channel 5</b>	<b>DMX Value Range</b>	<b>Function</b>
Amber LED	0-255	0-100%
<b>Channel 6</b>	<b>DMX Value Range</b>	<b>Function</b>
Chase	1-15	Chase 1
	16-31	Chase 2
	32-47	Chase 3
	48-63	Chase 4
	64-79	Chase 5
	80-95	Chase 6
	96-111	Chase 7
	112-127	Chase 8
	128-143	Chase 9
	144-159	Chase 10
	160-175	Chase 11
	176-191	Chase 12
	192-207	Chase 13
	208-223	Chase 14
	224-255	Chase 15
<b>Channel 7</b>	<b>DMX Value Range</b>	<b>Function</b>
Chase Speed	0-255	0-255 step per min

<b>Channel 8</b>	<b>DMX Value Range</b>	<b>Function</b>
Master Dimmer	0-255	0-100%
<b>Channel 9</b>	<b>DMX Value Range</b>	<b>Function</b>
Strobe	0-255	1-20 Hz

## FLUID

Use MAGIC FX Smoke Fluid for the best effect for the SMOKEJET. The machine is tested and calibrated with this liquid to get the best output performance. Warranty will be void if any other type of liquid is used, improper use of liquid may lead to machine failure and malfunction.

## SERVICE AND MAINTENANCE

- Do not allow the machine to become contaminated.
- Remove dust from air vents with air compressor, vacuum or a soft brush.
- Only use a damp cloth to clean the casing.
- Before storing run distilled water through the system to help avoid condensing the pump or heater.
- It is recommended to run the machine on a monthly basis in order to achieve best performance and output condition.
- Excessive dust, liquid and dirt built up will degrade performance and cause overheating.

### BREAKER RESET



Disconnect AC power before reset breaker. Only replace fuse with same type and rating.

*Step 1:* Disconnect AC power

*Step 2:* Flip breaker to ON position

*Step 3:* Turn on machine to test

### BREAKER

120V = 15A 250V

230V = 9A 250V



**TECHNICAL SPECIFICATIONS**

Input voltage	120V 60Hz or 230V 50Hz
Breaker	120V = 15A 250V 230V = 9A 250V
Heater	1550W
Warm-up time	5 min. (approx.)
Coverage volume	Height 5 Meters, Width 1 Meter
Max. operating time	8 seconds burst
Fluid tank capacity	2.4 L
Fluid consumption	25 ml/10 sec.
Recommended Fluid	MAGIC FX Fog Fluid for the best effect
Control option	DMX 512, Manual, Timer, Wireless remote
DMX channels	9 channels
Power connection	Neutrik Powercon
DMX data connection	5-pin XLR
Dimension	L345 x W193 x H385.7 mm
Dry weight	11.5 kg







**MAGIC FX B.V.**

Schouwrooij 27  
NL-5281 RE BOXTEL  
The Netherlands  
T. +31(0)411 63 50 13  
F. +31(0)411 63 50 12  
E. [info@magicfx.eu](mailto:info@magicfx.eu)

Chambre of commerce : 17178664  
V.A.T. : NL814544228B01